



Operating Instructions

1. Attach the head assembly to the Humm'V II base unit. Insert the long pin holder bracket first, then insert the short bracket on the other side. The attached cotter pin holds the mop head in place. Choose low or high holes, depending on the type of floor and personal preference. Use lower holes when applying thin coats.
2. Attach the plastic tube from the head assembly to the feed out connector in the front of the Humm'V II base unit.
3. Attach the lift handle to the head assembly by inserting the "J" hook into the lifting bracket and lay handle in lift handle rest. Lift the head assembly off the floor and hook it into the "up" position to move the unit without applying finish.
4. Place finish bucket on the base of the machine. Insert the suction hose into the bucket of finish. The metal suction filter at end of the suction hose should be flat on the bottom of the bucket.
5. Position the Humm'V II to the spot where you are going to begin applying finish.
6. Set the "Power On" switch to "On", set the "High/ Low" rocker switch to "High". Press the "Manual pump" switch and hold for about 3 seconds, or until finish comes out through the distribution tube onto the floor. Use the lift handle to let the head assembly down while pushing the machine forward to allow yarns to fold under the lamb's wool pad into the finish on the floor. Lifting and lowering the head assembly with the handle, move machine back and forth to get the yarns and lamb's wool wet with finish.
7. The finish pad will need to be saturated with finish. Starting out without enough finish on the pad may cause streaking.
8. Set timer to low, medium, or high setting – depending on the thickness of finish coat wanted. Refer to the "Coverage Chart" for water-based tile floors or "Coverage Chart" for gym floors to set the timer.
9. Set the "High/ Low" rocker switch to "Low" for tile floors. (Leave switch on "High" for gym floors.) From now on, each wheel turn will activate the pump and dispense finish according to the timer setting. Wheel turns only activate the pump when the machine is pulled. Pushing the machine does not activate the pump.
10. Begin pulling in a straight line. Maintain a "wet edge". Overlap each pass by 3 or 4 inches.

For operational questions or problems call 1-877-305-0006 or 1-708-672-0738

Tuffy Systems Inc.

747 W. Old Monee Road

Crete, IL 60417